

Picking the Right Metal Free Restoration

Assured Dental Lab

728 N. Prospect Street
Suite 109
Rockford, IL 61107

Website


www.assuredentallabinc.com

Email

assuredentallab@aol.com

need a prescription slip

www.adlrx.com

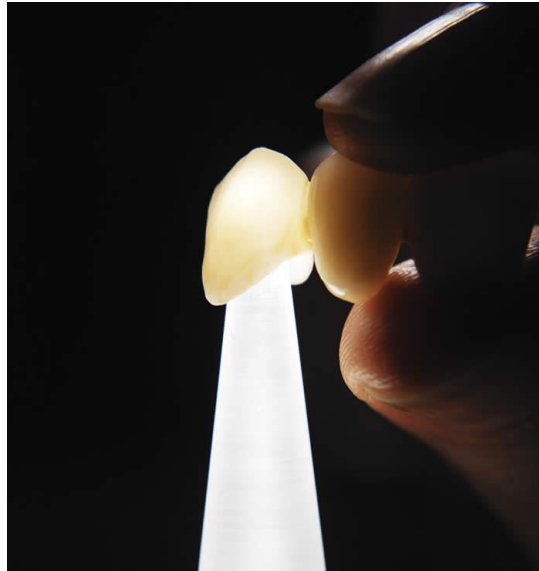

Choices

Procera Alumina, Procera Zirconia, e.max pressed, e.max CAD, VM9 pressed, Sculpture, Ultimate Restorative, full contour Zirconia.

- Small to large inlay or onlay: Use Sculpture or VM9 pressed or e.max pressed, or Ultimate Resorative.
- Veneers: Use Sculpture if you like to bond to it in the future.. VM9 pressed or Procera alumina if prepped aggressively. e.max pressed for extra strength/bruxing.
- Maryland Bridge: Use Sculpture/Fibercore or Procera Zirconia.
- Opening a bite and want to add on to occlusion yourself. Use Ultimate Restorative.

Anterior crowns and splinted single units: Use Procera alumina or Procera Zirconia to block out dark stumps.

- Anterior 3 unit Bridge: Use Procera Zirconia or e.max press.
- Anterior bridge combined with posterior single units and/or bridge: Use Procera Zirconia.
- Anterior single crown that has a short prep and/or under a heavy occlusal load: Use Procera Zirconia or e.max pressed.
- Anterior bridge over 3 units: Use Lava or Procera Zirconia.
- Posterior single units: Use Procera Zirconia or "Bruxer" crown made from IPS e.max. Less than 1mm occl. clearance use full contour Zirconia or Ultimate Restorative.
- Posterior bridges: Lava or Procera Zirconia.
- Any Cantilever bridge: Straumann Zirconia or Procera Zirconia
- Patient a grinder or Bruxer: Use IPS e.max Bruxer crown or Ultimate Restorative.
- Patient breaks everything. Solid Zirconia anatomically correct crown.

These are guidelines only.

Thank you for choosing Assured Dental Lab

Questions? call Dan at **815-964-5940**